


Carousel Spinner (Top Spinner Type) assembly instructions

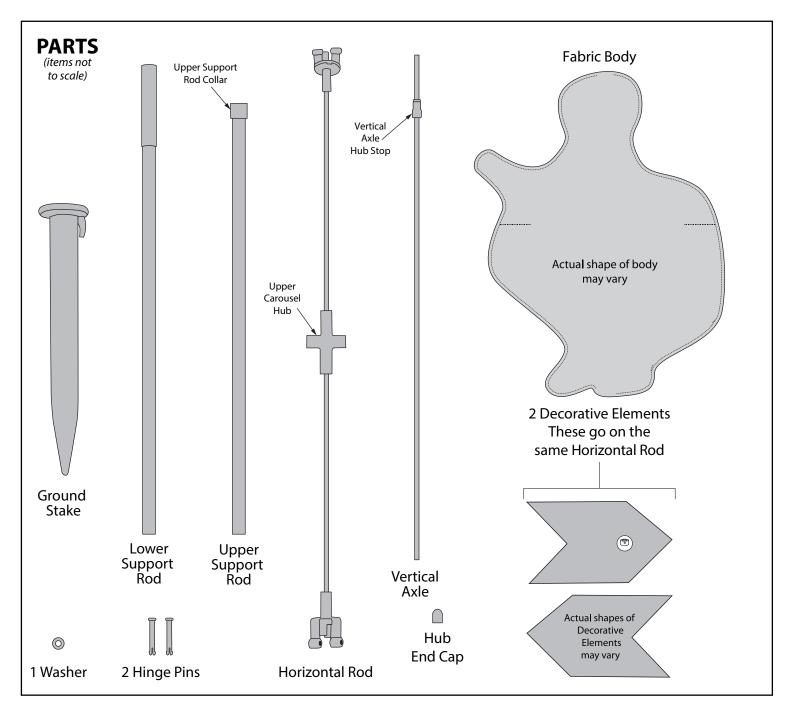

Step 1

Insert the Upper Support Rod into the Upper Support Rod Opening. Make sure the Upper Support Rod Collar on the Lower Support Rod goes in first. (See Diagram A)

Open the Fabric Body at the Access Opening and feed the Vertical Axle through the Upper Vertical Axle Rod Opening from the top of the fabric body and then through the Internal Hub. Make sure the Vertical Axle Hub Stop is on top of the rod and slightly above the Fabric Body (See Diagram A).

After the Vertical Axle is through the Internal

Hub, slide the Vertical Axle into the Upper Support Rod. The Upper Support Rod will stop at the correct height because there is an internal stop located in the Upper Support Pole. (see diagram B)

Step 2

Insert the Hinge Pin into Hinge on each Decorative Element to attach it to the Horizontal Rod. Make sure that the Decorative Element is not upside down when you attach it. The spinner will not spin properly if the Decorative Elements are upside down. The Decorative Elements should face opposite directions on the end of the Horizontal Rod. (Diagram C & D)

Step 3

Install the Horizontal Rod with Decorative elements on the Vertical Axle. First place the washer over the top of the Vertical Axle so it is seated on top of the Vertical Axle Stop. Then slide Upper Carousel Hub over the Vertical Axle and secure with the End Cap. (Diagram A)

Step 4

Drive the Ground Stake into the Ground and insert the Lower Support Rod. Join the Upper Support Rod of the Carousel Spinner with the Lower Support Rod. (Diagrams E)

www.premierkites.com

