


Step 1

Loosen the Thumb Screw on the Main Frame and slide the Spinner Axle as far as possible through the Frame. Make sure that the three stops on the Axle are on the same side of the WhirliGig Body as the Thumb Screw. This should make the ends of the Axle equally far from the WhirliGig Body. Tighten Thumb Screw. (Diagram A)

Step 2

Set the Spacer, two Washers and one spinner set aside. Slide one Washer onto the side of the Axle with the Stops. Decide which way you want the arms or wings to face and slide one set onto the Axle followed by the remaining Washer. Carefully pound the End Cap onto the Axle. Repeat with the remaining parts on the other side of the Axle, making sure to place the Spacer closest to the WhirliGig Body. (Diagrams B & C)


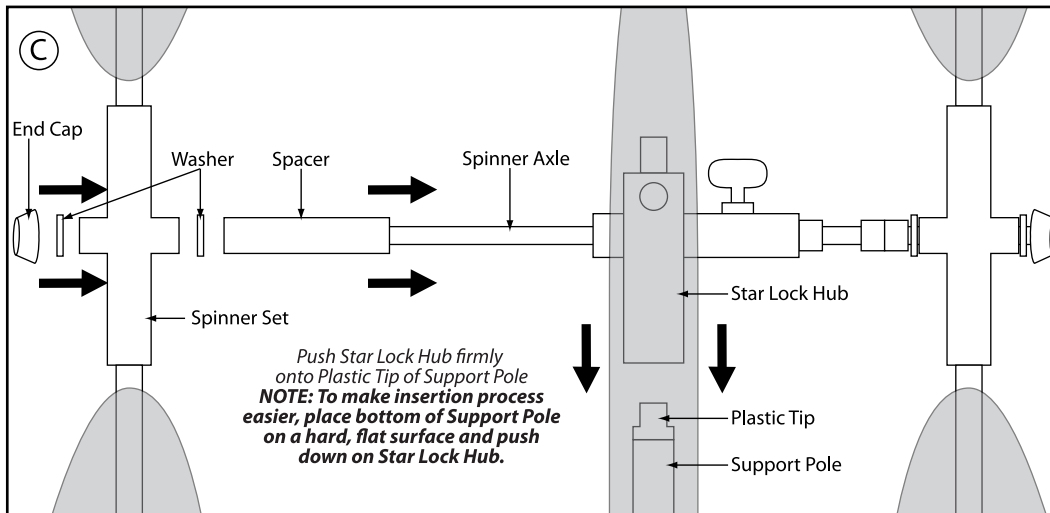


Step 3

Slide the narrow, plastic tipped end of the Support Pole into the Star Lock Hub by passing it through the opening in the fabric at the feet of the bird. Insert your hand into the opening in the fabric on the side of the bird to help guide the pole. Push down on the hub until the Support Pole locks into place and can not be removed. (Diagram C & D)

Step 4

Drive Ground Stake into ground and insert the Support Pole of assembled WhirliGig Spinner into the ground stake. (Diagram D)

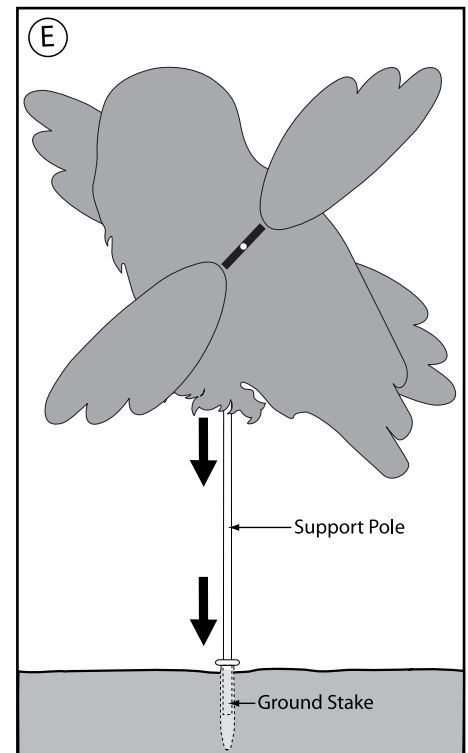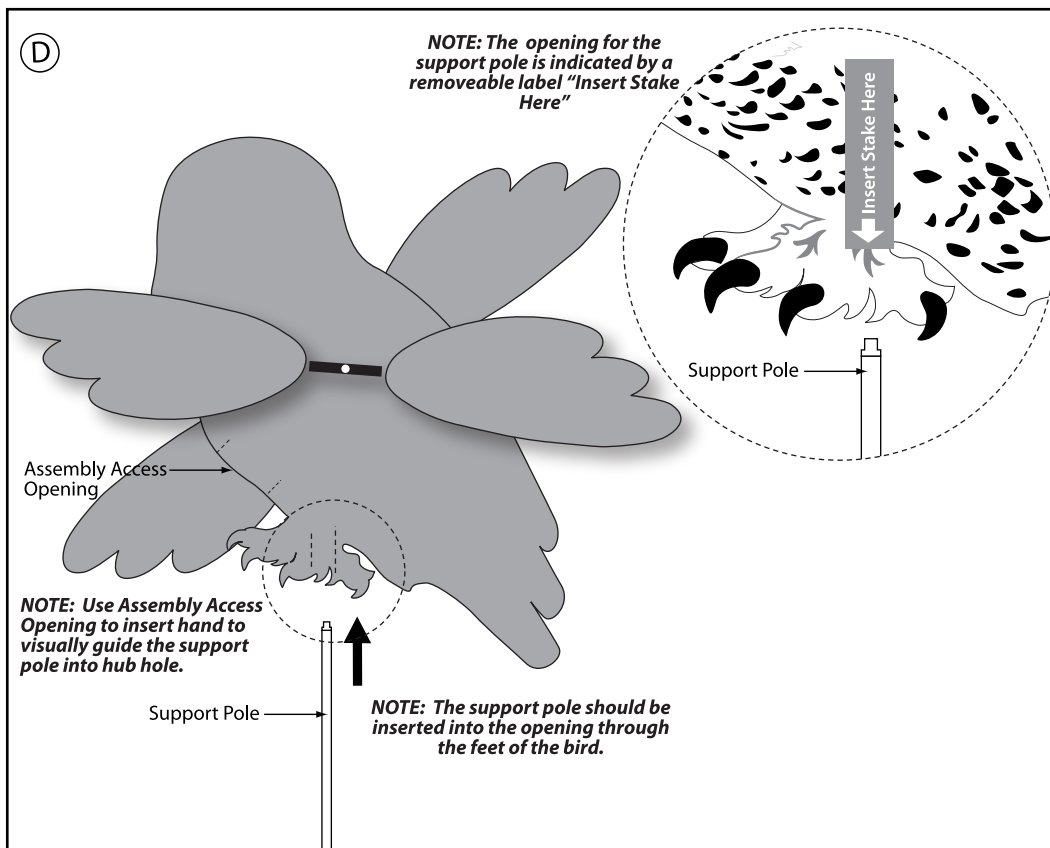

PLEASE NOTE: It is recommended that you take your WhirliGig Spinner inside during storms and harsh weather to preserve its durability.