

Assembly Instructions

Step 1

Remove Cotter Pin and slide one Nylon Washer from the Spinner Axle.

Step 2

Slide Spinner Wings onto the Spinner Axle with the streamers facing away from the Front Body Section and replace the Nylon Washer.

Step 3

Install the Rear Body Section and slide the Cotter Pin through the hole in the Body Ferrule and bend the ends outward to secure in place.

Step 4

Slide the narrow tip of Upper Support Pole into Hub. Push the Support Pole firmly down until it locks into place and cannot be removed. This is best done with the base of the Upper Support Pole on a hard surface and using a mallet or block of wood to tap into place.

Step 5

Connect Upper Support Pole with Lower Support Pole and insert into the ground.

Compatible with Premier's 6 mm Deck Mount (sold separately).

