


Night Owl Spinner assembly instructions

sku #25375

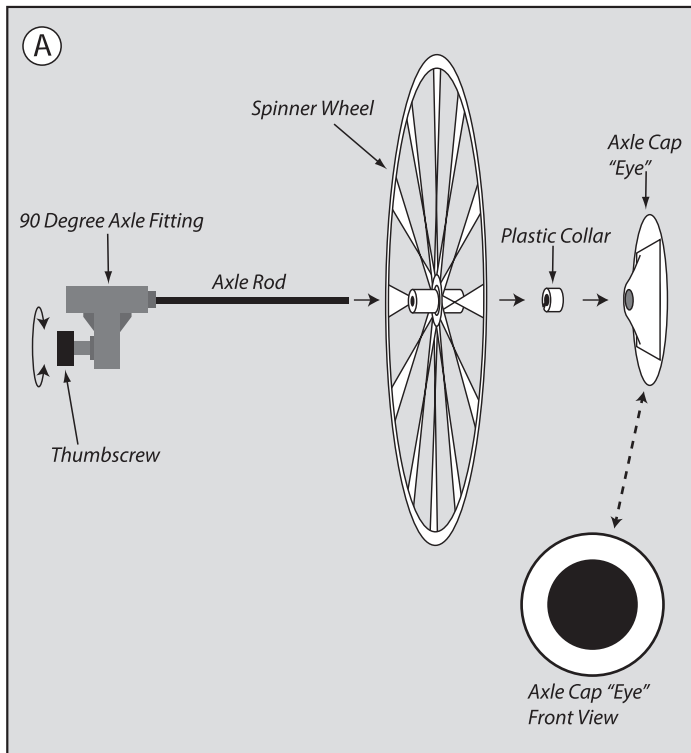

Step 1- Eye and Spinner Wheel Assembly

Insert the **Axle Rod** through the **Spinner Wheel**. Slide on **Plastic Collar**. Insert the end of the **Axle Rod** into the **Axle Cap "Eye"** and push eye firmly onto **Axle Rod** so it locks into place. Repeat on the opposite side. Please note, once **Axle Cap "Eye"** is pushed onto the **Axle Rod** it is extremely difficult to remove. (Diagram A)

Step 2- Eye and Spinner Wheel Installation

Loosen the **Thumbscrew** on the **90 Degree Axle Fitting** and slide the fittings onto the **Vertical Eye Supports**. Make sure both eyes of the **Spinner Wheel Assemblies** face forward and tighten **Thumbscrews**. (Diagram A and B)




Step 3- Main Support Strut Installation

Locate the **Bottom Opening** on the Owl's body and insert ferruled end of a **Main Support Strut** and connect with **Internal Body Strut**. Please note- *Open velcro tabs at side of body sleeve to help guide the Main Support Strut into the Internal Body Strut*. Your Owl Spinner is now complete! (Diagram C)

Step 4- Ground Installation

Drive plastic **Ground Stake** into ground and insert **Main Support Strut** into Plastic **Ground Stake**. (Diagram D)

Enjoy your owl spinner!

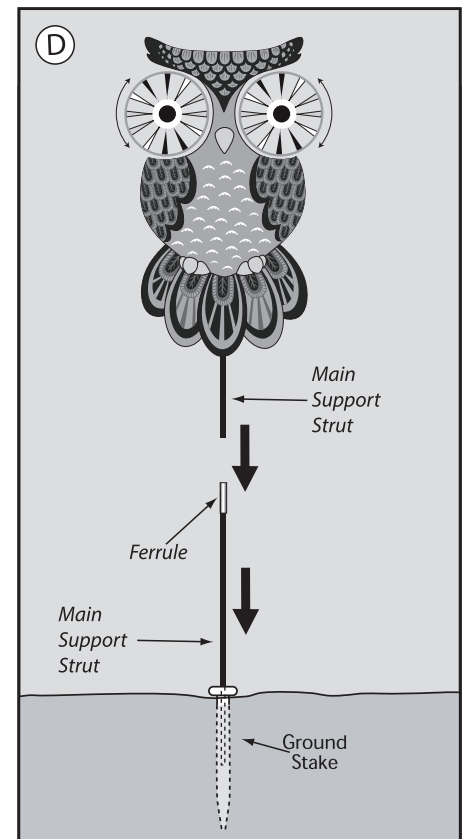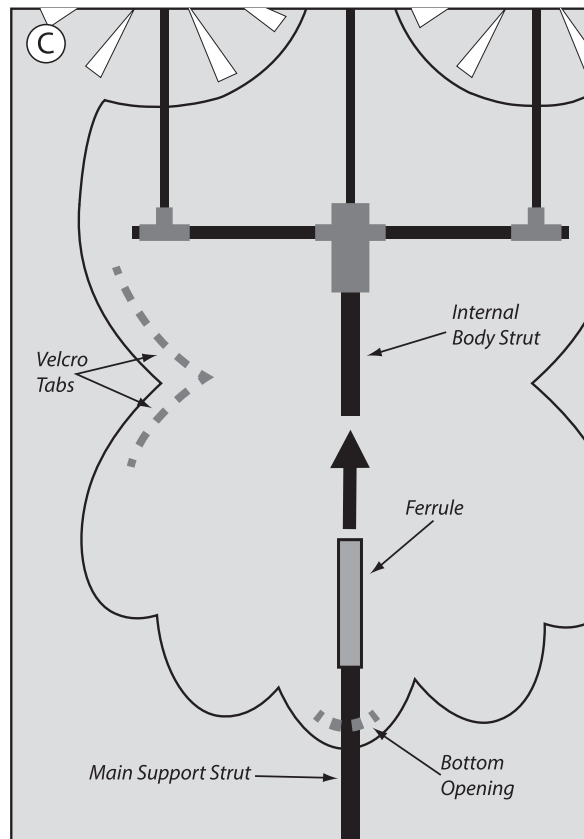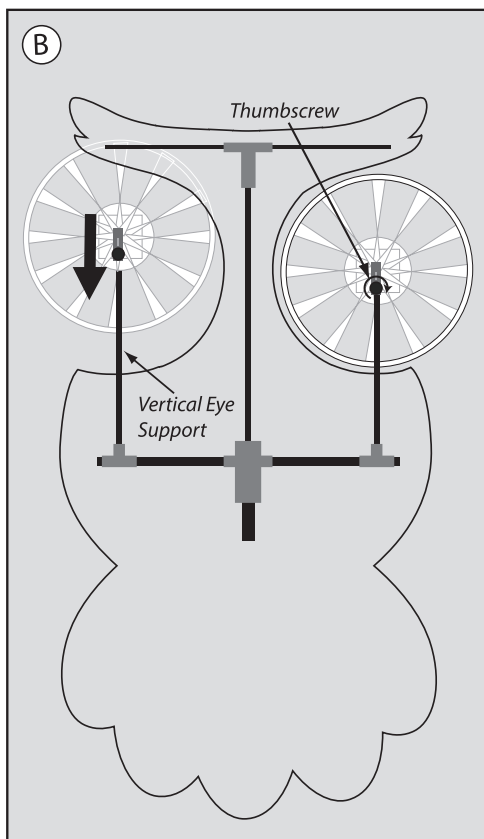

PLEASE NOTE: Although your Owl Spinner is constructed with UV resistant SunTex™ fabric, it is recommended that you take it inside during storms and harsh weather to preserve its durability.