

SPINNING KOI ASSEMBLY INSTRUCTIONS



1. Attach Wing Fins to Wing Hub. **Please note that Wing Fins are inserted at an offset pattern.** Make sure Wing Fins are fully inserted into hub holes. You will hear a "click" sound when the pins are all the way in.

PLEASE NOTE: If you make a mistake in the placement of the Wing Fins (i.e. backward, wrong color sequence etc.), you can remove them by carefully inserting a small flat end screwdriver between the base of the Wing Fin Pin and the hub and pushing it up and out.

2. Drive Ground Stake into ground. Slide Ground Shaft into Ground Stake. Slide Main Hub Assembly with Garden Spinner over Ground Shaft Ferrule. If you desire extra height, an extra ½ in. Support Pole (sold separately) may be added: item #85002.

PLEASE NOTE: Although your Garden Spinner is constructed with UV resistant SolarMax™ fabric, to preserve its durability, we recommend taking spinner inside during harsh weather or when not in use.

**PLEASE NOTE THAT WING FINS ARE
INSERTED AT AN OFFSET PATTERN**

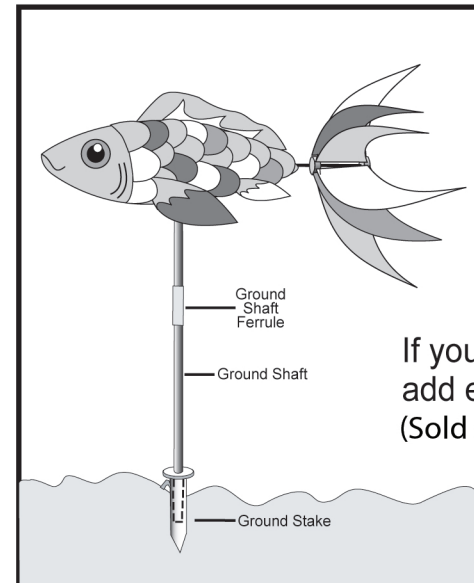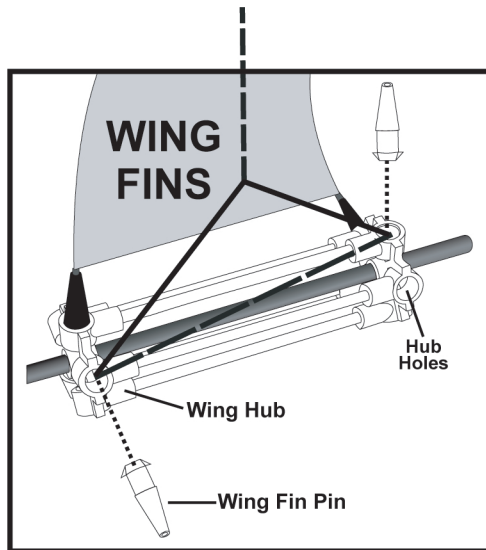

If you desire extra height,
add extra ground shaft
(Sold separately)