

Premier's Squeaker kites use 10 lb. Test Line  
Wind Range: 5 - 18 mph

to fly:

- No assembly - your Squeaker is ready to fly right now!
- Just tie the line onto the end of the loop and launch the kite in a gentle breeze.
- For the easiest launch - let out about 50 feet of line and have a friend downwind toss Squeaker up in the air.
- Let out line and watch your Squeaker climb!
- Wind range 7-15 mph

