



## #25339 MERMAID ASSEMBLY INSTRUCTIONS

1. Open the Velcro closures on the Body Sleeve and insert the Front Body Rod into the Main Hub from within the Body Sleeve. Reclose the Velcro closure (Diagram A). Slide the Vertical Support Pole into the Hub, with the plastic nub facing upwards. Push the hub down hard to lock strut into place.
2. Attach Wing Fins to Wing Hub. Please note that the Wing Hub is constructed so that the Wing Fins are inserted at an offset pattern. Make sure Wing Fins are fully inserted into hub holes. You will hear a "click" sound when the pins are in all the way. (Diagram C)

**PLEASE NOTE: If you make a mistake in the placement of the Wing Fins (i.e. backward, wrong color sequence etc.), you can remove them by carefully inserting a small flat end screwdriver between the base of the Wing Fin Pin and the hub and pushing it up and out.**

3. Drive Ground Stake into ground. Slide Support Pole into Ground Stake. Slide Main Hub Assembly with Garden Spinner over Support Pole Ferrule. (Diagram D)

**PLEASE NOTE: Although your Garden Spinner is constructed with UV resistant SunTex™ fabric, to preserve its durability, we recommend taking the Spinner inside during harsh weather or when not in use.**

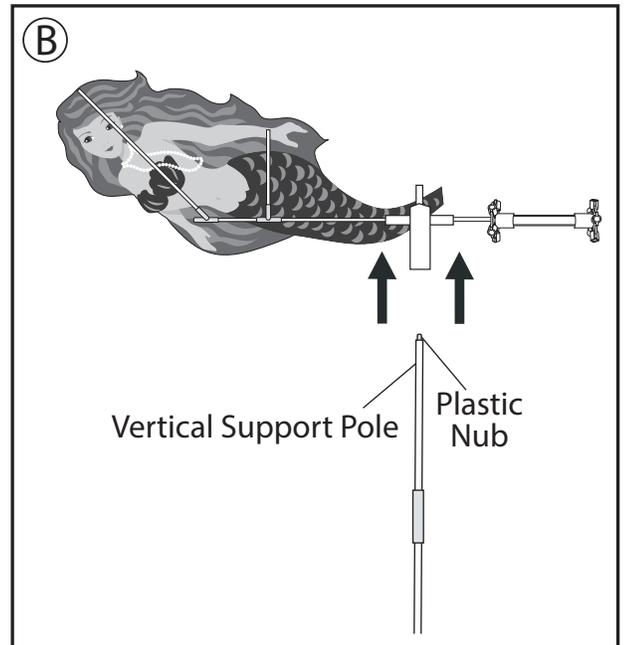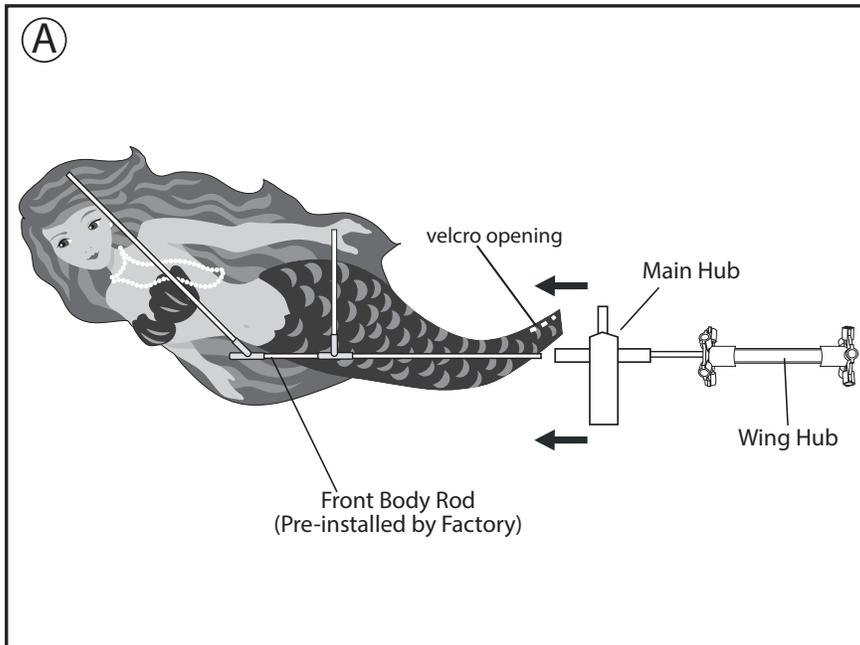

**PLEASE NOTE THAT WING HUB IS MADE SO THAT WING FINNS ARE INSERTED AT AN OFFSET PATTERN**

