


Classic Cruiser Spinner assembly instructions

sku #26732, #26733

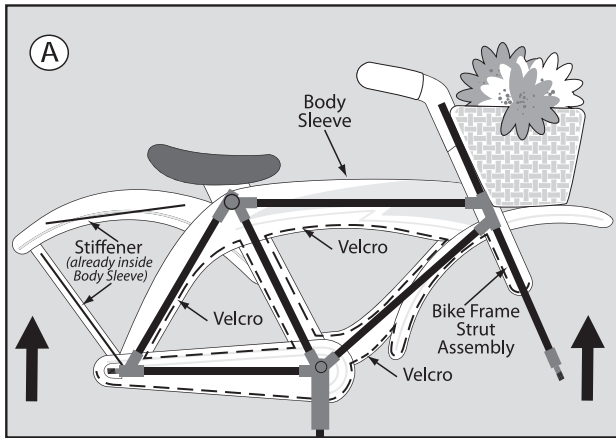


Step 1

The body of your Vintage Bike is shipped in two sections: the Body Sleeve and the Bike Frame Strut Assembly. First open the Velcro Tabs along inside of the Body Sleeve and insert the Bike Frame Strut Assembly inside the sleeve. (Diagram A) Close the Velcro Tabs. When you insert the Frame into the Sleeve, make sure that the Rear Axle is visible through the cutout hole in the Body Sleeve. (Diagram B)

Step 2

Through the opening in the Body Sleeve, slide one of the Axle Fittings onto the Rear Axle. Locate the Threaded Axle Lock Nut and screw it onto the end of the Rear Axle, tightening to hold the Axle Fitting in place. Repeat with the Front Axle Fitting, making sure the Axle Fitting is pointed the same direction as the Rear Axle. (Diagram C)



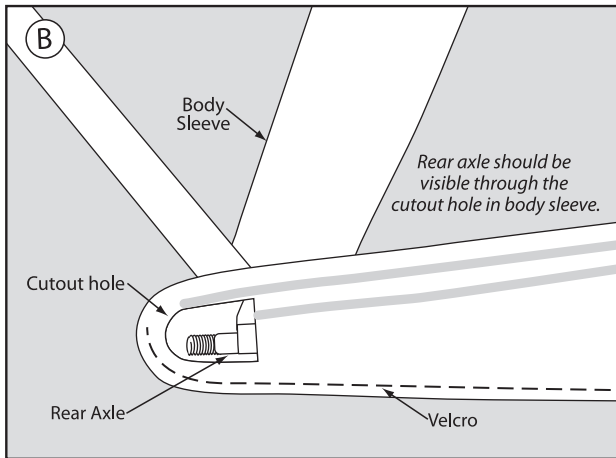


Step 3

Slide Spinner Wheel and Washers onto Axle. The Washers should be placed on either side of the Wheel. Tap Axle Caps onto ends of the Axles using a mallet or piece of wood. (Diagram D)

Step 4

Drive the Ground Stake into ground and insert the non-ferruled end of the Support Pole into the Ground Stake. Insert the Upper Pole Section of your completed Classic Cruiser Bike Spinner into the Ferrule on top of the Support Pole. (Diagram E)

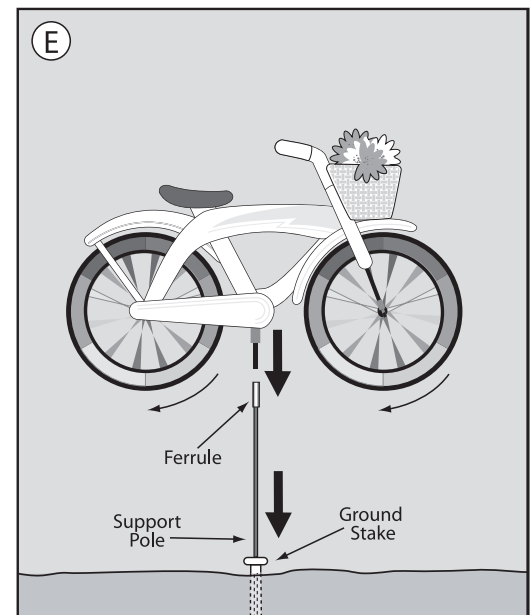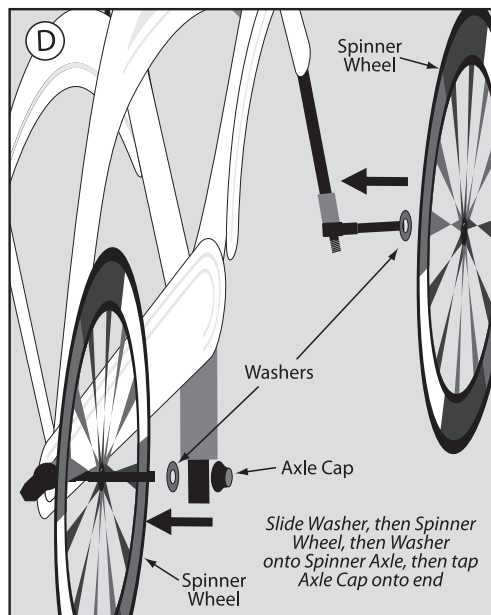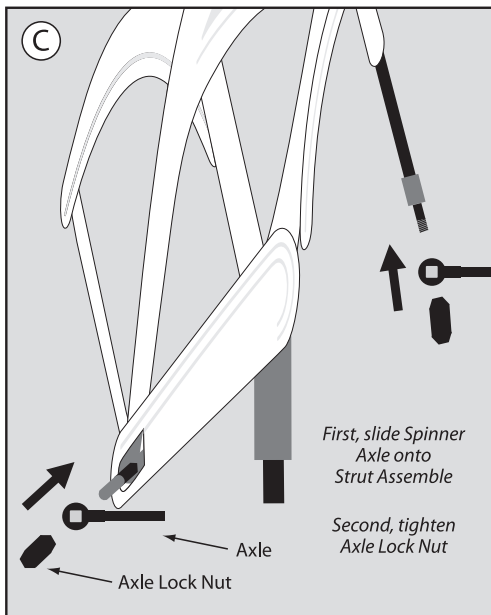

PLEASE NOTE: Although your Bicycle Spinner is constructed with UV resistant SunTex™ fabric, it is recommended that you take it inside during storms and harsh weather to preserve its durability.