SAILBOAT

assembly instructions

Step 1:

Insert center strut into nose & tail pockets (A).

Step 2:

Insert cross strut into cross strut pocket (B).


Step 3:

Attach flying line to bridle loop on front of the kite.

(C).

Note:


Cross strut should be on top of center strut as you face back of kite (D).

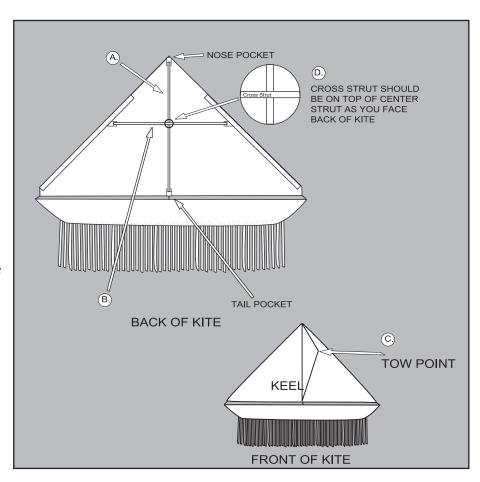

FLIGHT INSTRUCTIONS:

- -Attach flying line to Tow Loop.
- -Have a friend stand about 75 ft. downwind from you and hold the kite with its Leading Edge pointed towards the sky.
- -As the wind catches the kite, signal your friend to release it while you bring in the line with long steady pulls.
- -Slowly let out more line as the kite flies upward.

OPTIMUM WIND CONDITIONS FOR SAILBOAT

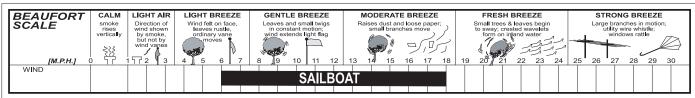

Note: Wind conditions aloft may vary considerably from those found near ground level.