# QUILTED 10.5' STRATA DELTA assembly instructions

### Step 1:

Unfold kite making sure that the keels are on the bottom.

#### Step 2:

Organize the struts, two small tails, and the large tail.

(Diagram A)

## Step 3:

Connect the two horizontal cross struts. (Diagram B)

# Step 4:


Insert the horizontal cross struts through the center sleeve and into the spar pocket on either side of the kite.


(Diagram C)

### Step 5:

Connect the small tails to the kite's tail connection tabs at the outside tips of the kite.

(Diagram D)

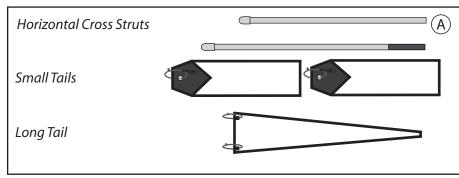

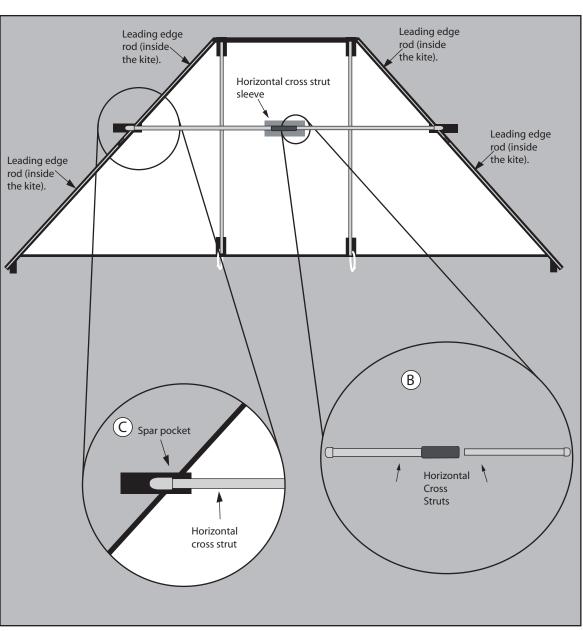

#### Step 6:

Attach the center tail. Locate the connecting strings at the top of the tail. These strings will connect to the center strings from the kite using a Lark's Head Knot. (Diagram E)


Lark's Head Knot (Diagram F)


#### Step 7:


Kite should now be ready to fly. Attach the kite line to the tow loop at the end fo the bridle.


(Diagram G)

Note: In light wind consider omitting use of the center tail.

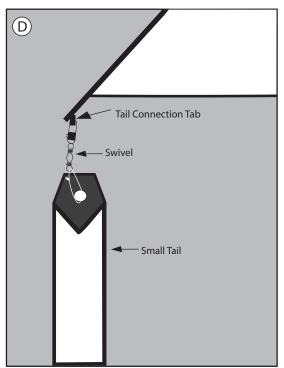

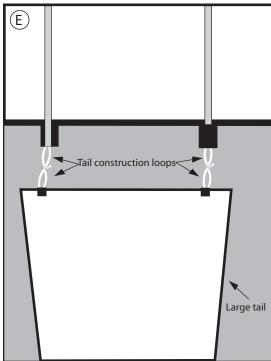

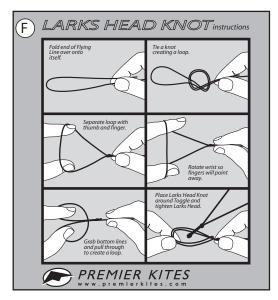

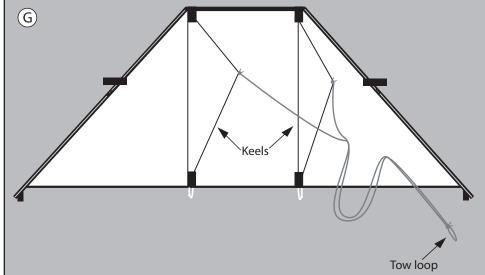

# **FLIGHT INSTRUCTIONS:**

- -Attach flying line to Tow Loop.
- -Have a friend stand about 75 ft. downwind from you and hold the kite with its Leading Edge pointed towards the sky.
- -As the wind catches the kite, signal your friend to release it while you bring in the line with long steady pulls.
- -Slowly let out more line as the kite flies upward.

RECOMMENDED LINE: 250 LB TEST LINE

#### OPTIMUM WIND CONDITIONS FOR QUILTED 10.5' STRATA DELTA

