


get ready:

-Insert tail strut into sleeves on the tail.

-Now insert the cross strut into the plastic dihedral and insert opposite ends into the leading edge fittings.

-Attach a line to the tow point on the bridle and you are ready to fly.

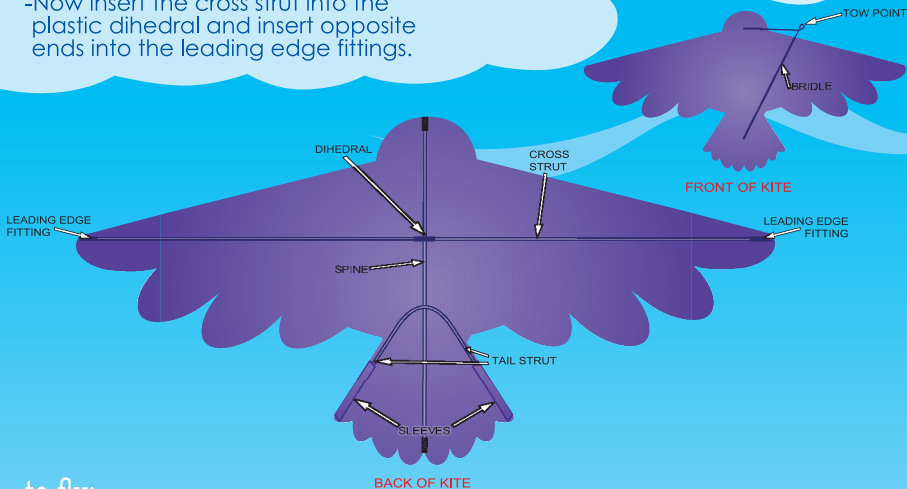

to fly:

Have a friend stand about 75 feet downwind from you and hold the kite with its nose pointed towards the sky. As the wind catches the kite, signal your friend to release it while you steadily pull in line until the kite is aloft. As the kite flies upward, slowly release more line.

