
## get ready:

-Insert tail struts into the tubing located on the spine and sleeves on the tail.

-Attach a line to the tow point on the bridle and you are ready to fly.

-Now insert the cross strut into the plastic dihedral and insert opposite ends into the leading edge fittings.

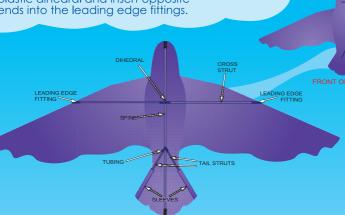

to fly:

BACK OF KITE

