


ASSEMBLY INSTRUCTIONS FOR 14' DELTA:

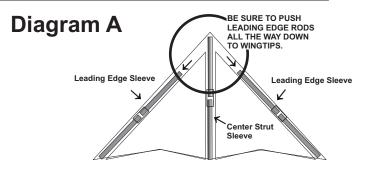

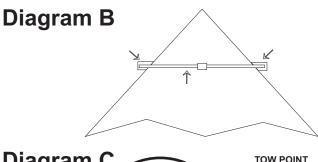

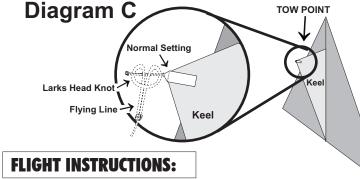

Join the Leading Edge Rods and Center Strut Rods at their Ferrule Joints. For your convenience, all rods have been pre-placed in their correct fabric sleeves. To join the ferrules, simply feel along the sleeve for the ferrule joint and push into place. Make sure the Center Strut is fully inserted into the center sleeve. (Diagram A)

IMPORTANT NOTE! Make sure the Leading Edge Rods are pushed all the way to the end of the Wingtips. There will be a short length of unfilled Leading Edge Sleeve by the nose --do not worry about this, it is how the 12' Delta frame should be.


- Assemble Cross Strut and insert into Cross Strut Pockets. (Diagram B)
- Attach line to Keel Tow Point using a Larks Head Knot. (Diagram C)

CAUTION - CAUTION - CAUTIONUSE WITH EXTREME CARE! THIS KITE PRODUCES
EXTRAORDINARILY STRONG PULL

It is the user's sole responsibility to understand this warning and to exercise extreme caution while using this kite for traction or recreational flying purposes. The manufacturer accepts no responsibility for injuries to persons or damage to properties through the use of this product.

- -Have a friend stand about 75 ft. downwind from you and hold the kite with its nose pointed towards the sky.
- -As the wind catches the kite, signal your friend to release it while you bring in the line with long steady pulls.
- -Slowly let out more line as the kite flies upward.

RECOMMENDED LINE: 150 LB TEST LINE



Note: Wind conditions aloft may vary considerably from those found near ground level.

PREMIER KITES HYATTSVILLE, MD WWW.PREMIERKITES.COM MADE IN CHINA