
DRAGON DIAMOND

assembly instructions

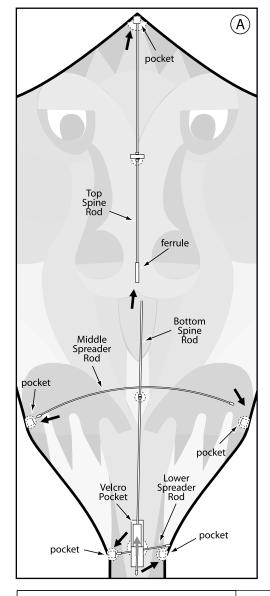

Step 1:

Unroll kite and lay out flat facedown.

Step 2:

Attach pre-inserted Top Spine Rod to pre-inserted Bottom Spine Rod at ferrule. Make sure top of assembled Spine Rod is fit snuggly into pocket at top of kite body and tighten and close Velcro Pocket at bottom of kite body. (diagram A)

Step 3:


Slide (shorter) Lower Spreader Rod underneath Velcro Pocket and into pockets at both edges of lower kite body. Slide (longer) Middle Spreader Rod under Spine Rod and into pockets at both edges of middle kite body. (diagram A)

Step 4:

Insert ends of Cross Rods without Arrow Nocks into Dihedral on Spine Rod. Hook Arrow Nock ends of Cross Rods onto Bead Tensioners at edges of kite body and tension as needed. (diagram B)

Step 5:

Insert ends of Cross Rod Support Bar into connectors on assembled Cross Rod. (diagram B)



Step 6:

Make sure Bridle is pulled completely through front of sail, attach line to Bridle, and your Dragon Diamond is ready to fly!

FLIGHT INSTRUCTIONS:

- -Tie flying line to Tow Loop.
- -Have a friend stand about 75 ft. downwind from you and hold the kite with its head pointed towards the sky.
- -As the wind catches the kite, signal your friend to release it while you bring in the line with long steady pulls.
- -Slowly let out more line as the kite flies upward.

RECOMMENDED LINE: 80 LB TEST LINE

OPTIMUM WIND CONDITIONS FOR DRAGON DIAMOND

