PREMIER COLLECTIONS

WILD THING

assembly instructions

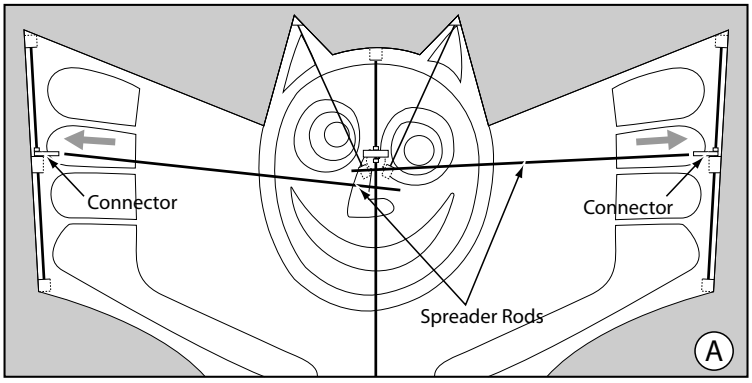

Step 1:
Unroll kite and lay out flat facedown.

Step 2:
Insert Spreader Rods into Connectors on outer edges of wings (A).

Step 3:
Insert Spreader Rods into Dihedral on Center Spine (B).

Step 4:
Insert additional Spreader Rods into outer pockets at middle and bottom of kite body (C).

Step 5:
Make sure bridle is pulled completely through front of kite.

Step 6:
Attach line to bridle, and your Wild Thing is now ready to fly!

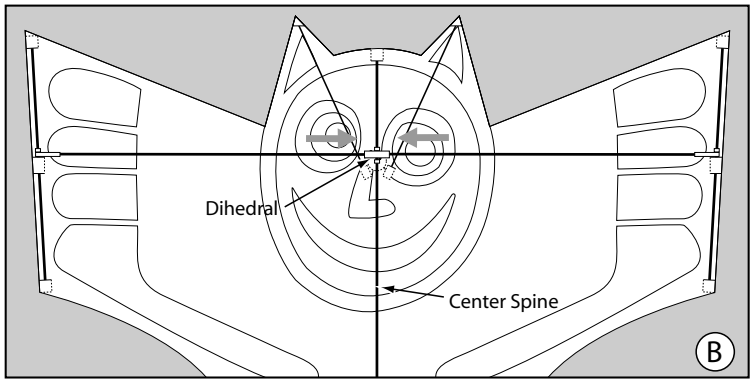

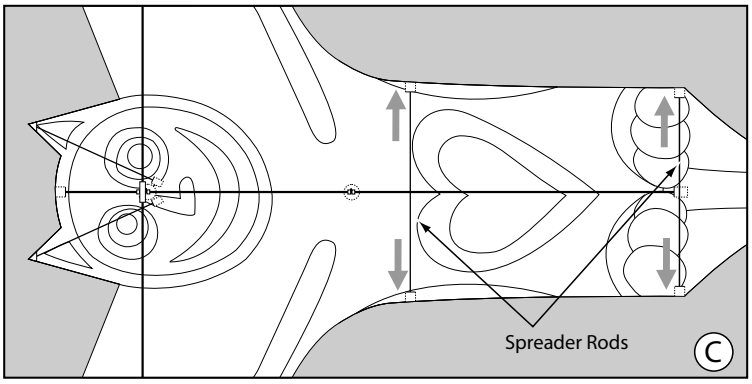

FLIGHT INSTRUCTIONS:

-Tie flying line to Tow Loop.
-Have a friend stand about 75 ft. downwind from you and hold the kite with its head pointed towards the sky.
-As the wind catches the kite, signal your friend to release it while you bring in the line with long steady pulls.
-Slowly let out more line as the kite flies upward.

RECOMMENDED LINE: 80 LB TEST LINE

OPTIMUM WIND CONDITIONS FOR WILD THING

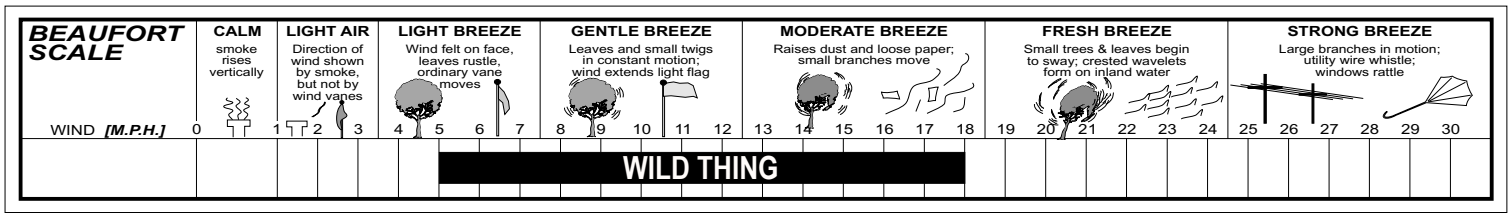

Note: Wind conditions aloft may vary considerably from those found near ground level.